Installation Instructions

Dispenser Board Replacement

WR55X11192 (black) or WR55X11191 (white)

For ZISB360/420/480 (black), or ZISW360/420/480 (white)

Questions? Call 1-800-444-1845 (Monogram Preferred Services)



DISCONNECT POWER TO THE REFRIGERATOR BEFORE BEGINNING INSTALLATION

TOOL NEEDED:


Phillips head screwdriver

Before you Begin:

Read these instructions completely and carefully.

STEP 1 REMOVE DISPENSER TRIM

- Disconnect power to refrigerator at circuit breaker.
- Check to make certain power to refrigerator is off by opening refrigerator door to confirm both the interior lights and temperature display lights are off.
- Remove dispenser trim pull out and up on bottom flange corners to release tabs. The trim fits tightly against panel, so pull firmly with fingers on one corner until it pops free - then the other corner. To avoid damage to the panel, do not pry the trim away from the dispenser recess with screwdriver.

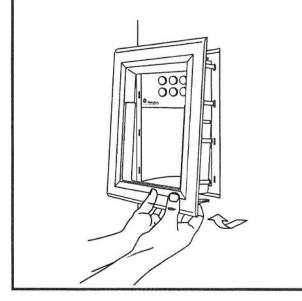


STEP 2 REMOVE EXISTING ELECTRONIC DISPENSER BOARD


 The dispenser board is attached to housing shield with a #2 Phillips screw. Use Phillips screwdriver to remove screw. Save screw for reinstallation.



 To remove the dispenser board, pull out and lift up.

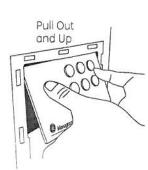

- After removing board, disconnect the three electric terminals. Gently pull on each connector to disconnect.
- · Discard the old board.

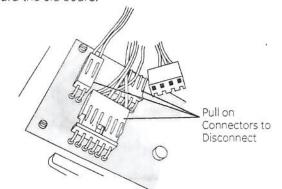


STEP 3 INSTALL NEW ELECTRONIC DISPENSER BOARD


 Remove plastic film from front of new board. This must be done before the new board is installed.




 Reconnect the three electrical terminals by gently pushing the connectors onto terminals.

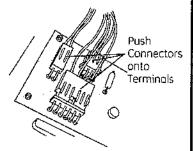

 To reinstall new board, align " " shape molded bracket with right side of housing shield bracket.

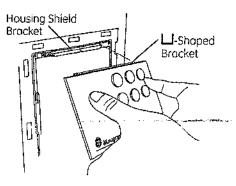


 Angle to top of board into the tabs on housing shield bracket. Snap board into place.

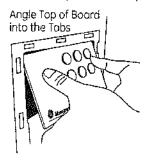




• Replace and retighten mounting screw.

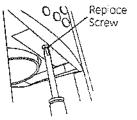

STEP 4 REINSTALL DISPENSER TRIM

• Starting at the top, press and snap dispenser trim into the dispenser recess on the refrigerator door.

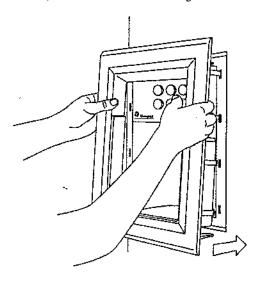

- Reconnect power to the refrigerator. If the lights on the board turn on, the board is functioning. If the lights do not turn on, disconnect power again and check that the connectors are fully seated. Follow the same steps as before to remove housing and check connections.
- Confirm that the board works by dispensing some crushed ice, cubed ice and water.

Congratulations! You have completed the installation of your new Dispenser Board. If you have any further issues with this dispenser board or your refrigerator, please call 1-800-444-1845 (Monogram Preferred Services) for additional help or information.

Thank you for choosing GE Appliances.

